




## Installation of Medical Valve Locking Kit

### Step 1: Remove valve handle nut

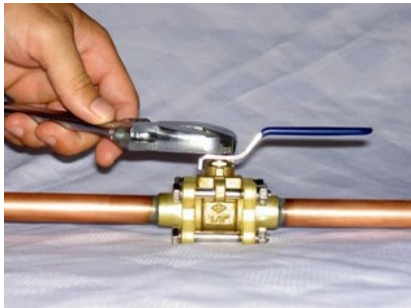

### Step 2: Insert complete locking kit assembly onto the valve stem. There are (3) pieces:

- The large piece fits over the valve stem with the “notch” facing down
- The medium sized piece drops into the large piece. Make sure the holes on the “medium” sized piece are towards the top
- Insert the small piece with the female screw ends facing down

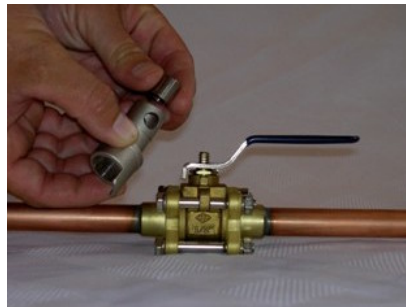

### Step 3: Tighten the previously inserted female screw with the appropriate sized allen wrench

